


Installation Guide

Version: 1.1
Date: Dec. 2010




Warning: No operating with power on!


1. Equipment Installation

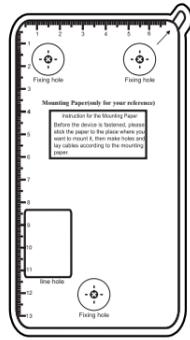


(1) Post the mounting template on the wall. Drill the holes according to the marks on the template (holes for screw and wiring).

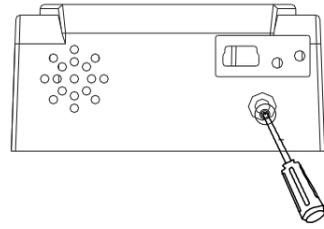


(2) Remove the screw on the bottom of device.

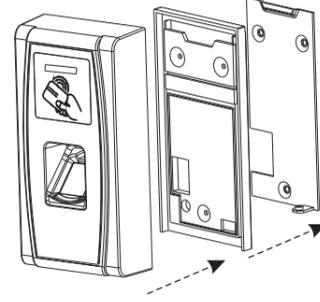


(3) Take away the back cover and waterproof pad.

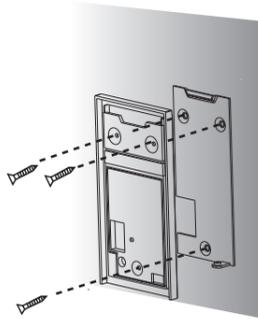

(4) Fix the back cover and waterproof pad on the wall according to the mounting paper.

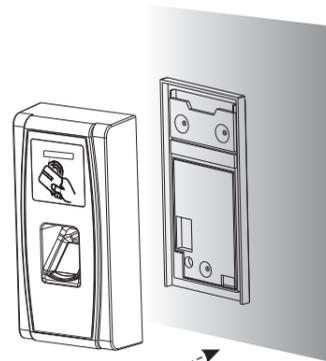


(5) Set the device to the fixed waterproof pad.

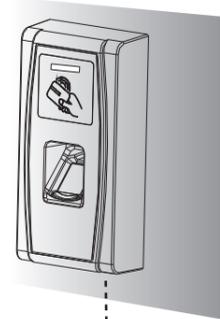

(6) Fix the device to the back cover.

2. Structure and Function

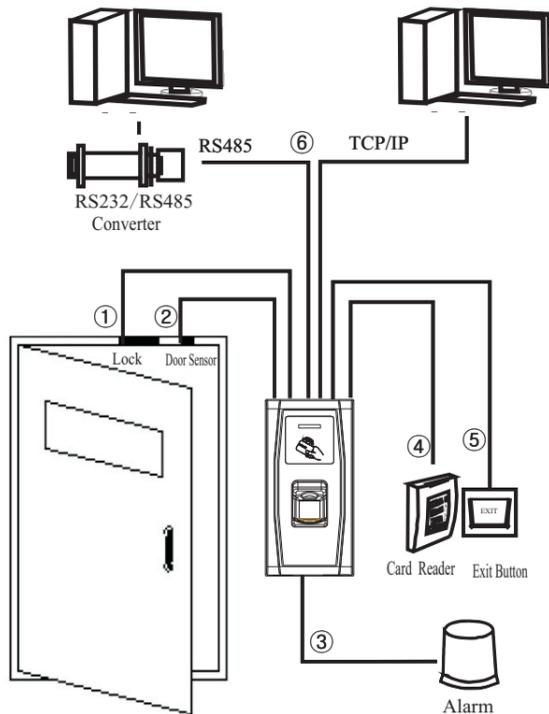


Access Control System Function:

- (1) If a registered user verified, the device will export the signal to unlock the door.
- (2) Door sensor will detect the on-off state. If the door is unexpected opened or improperly closed, the alarm signal (digital value) will be triggered.
- (3) If the device being illegally removed, the device will export alarm signal.
- (4) External card reader is supported.
- (5) External exit button is supported; it is convenient to open the door inside.
- (6) Supports RS485, TCP/IP modes to connect with PC. One PC can manage multiple devices.


3. Lock Connection

- (1) The system supports NO LOCK and NC LOCK. For example the NO LOCK (normally open at power on) is connected with 'NO' terminal, and the NC LOCK is connected with 'NC' terminal.
- (2) When the Electrical Lock is connected to the Access Control System, you need to parallel one FR107 diode (equipped in the package) to prevent the self-inductance EMF affect the system, do not reverse the polarities.

(I) Share power with the lock:

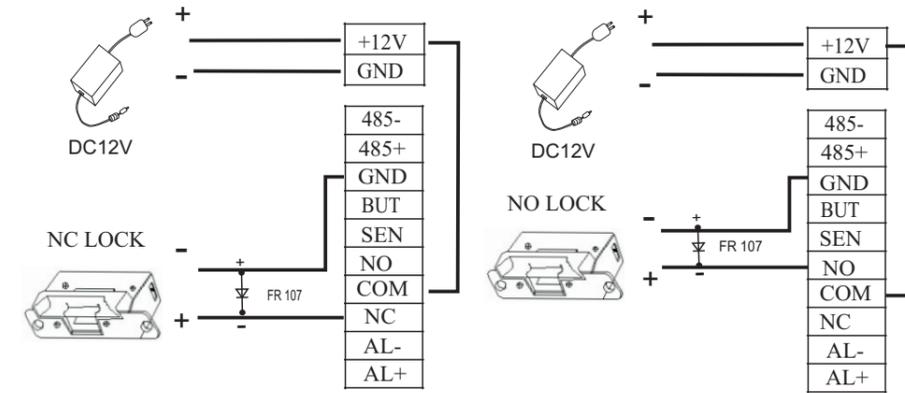


(II) Does not share power with the lock:

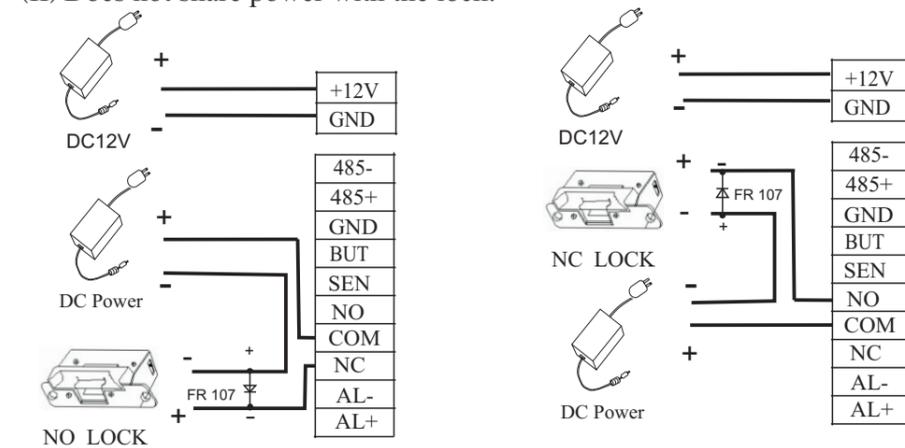


①: 'I': device output current, 'U_{LOCK}': lock voltage, 'I_{LOCK}': lock current.

4. Connected with Other Parts:

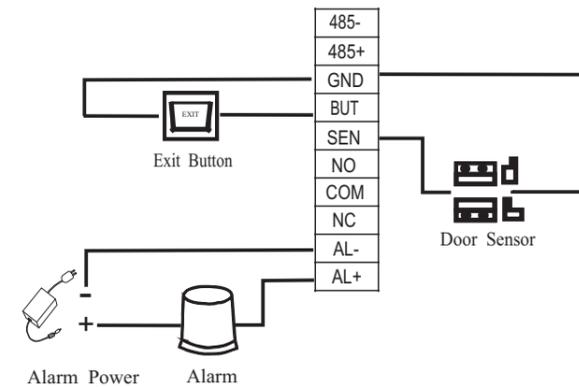

Voltage output \leq DC 12V for Alarm


5. Connected with Power:

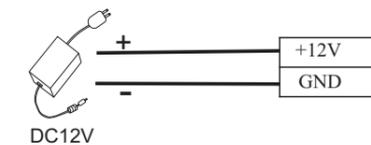

Input DC 12V, 500mA (50mA standby)
Positive is connected with '+12V', negative is connected with 'GND' (do not reverse the polarities).

6. Wiegand Output


The device supports standard Wiegand 26 output, as a reader device it has a very good compatibility.

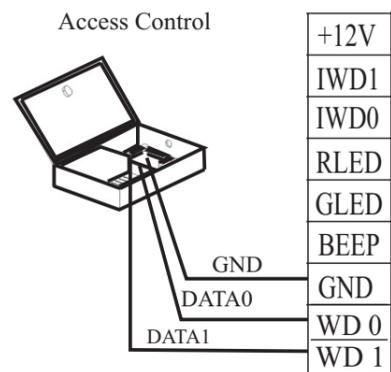

- (1) Please keep the distance between the device and Access Control or reader less than 90 meters (Please use Wiegand signal extender in long distance or interference environment).
- (2) To keep the stability of Wiegand signal, connect the device and the Access Control or reader in same 'GND' in any case.

7. Wiegand Input

The device has the function of Wiegand signal input. It supports to connect with an independent reader. They are installed each side of the door, to control the lock and access together.

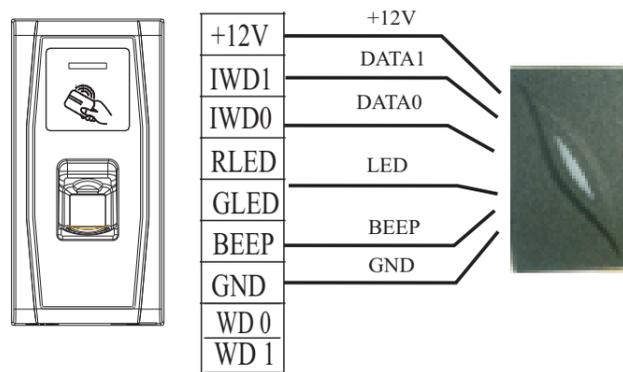

8. Other Functions:

(1) Manual Reset:

If the device does not work properly because of misoperation or other abnormality, you can use 'Reset' function to restart it. Remove the black rubber cap, then stick the Reset button hole with a sharp tool (the tip diameter less than 2mm).

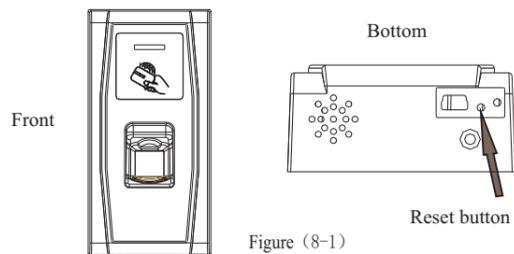


Figure (8-1)

(2) External USB Keyboard (Refer to your own keyboard):

The device supports external keyboard to offer more flexible operations. The keyboard need to purchase separately. It's convenient to enroll users, remove users, recovery factory settings, set the keyboard password and so on. The operation please refer to the user manual.

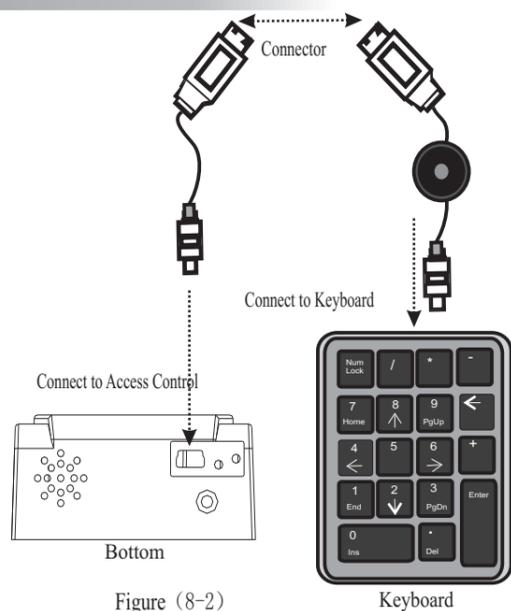


Figure (8-2)

(3) Recovery Factory Settings:

You can use the tamper switch (As figure (8-3)) to recovery factory setting, such as device number, system password, IP address, RS485 address, etc. More information please refers to the user manual.

Press the tamper switch three times after the alarm being triggered 30 seconds but no more than 60 seconds.

Notes: The user data won't be cleared.

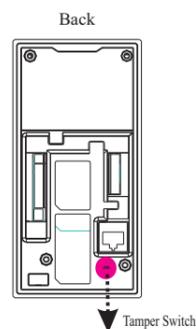


Figure (8-3)

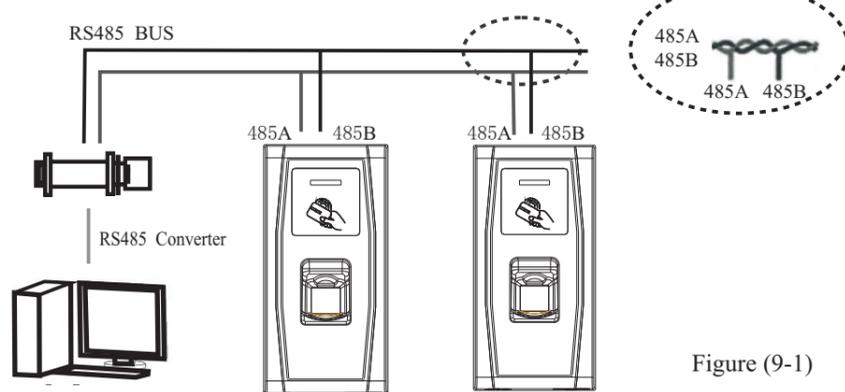


Figure (9-1)



Warning: No operating with power on!

9. Communication

There're two modes that the PC software communicate and exchange information with the device: RS485 and TCP/IP, they all support remote control.

Terminal	PC Serial Ports
485A	RS485 +
485B	RS485 -


(1) RS485 Mode:

Please use specified RS485 wire, RS485 active converter and bus-type wiring.

- To prevent the interference, the last device in the RS485 bus connect a 120 Euro resistor. That is turning the switch '4' (terminal resistor switch) to 'ON'.
- The RS485 device No. is shown in PC software. You can change it as follows. (The default switch state is 'OFF').

Machine No.	Port 1	Port 2	Port 3
Switch State	'ON'	'ON'	'ON'
No.1	✓		
No.2		✓	
No.3	✓	✓	
No.4			✓
No.5	✓		✓
No.6		✓	✓
No.7	✓	✓	✓

The symbol '✓' means turning the switch to 'ON' position.

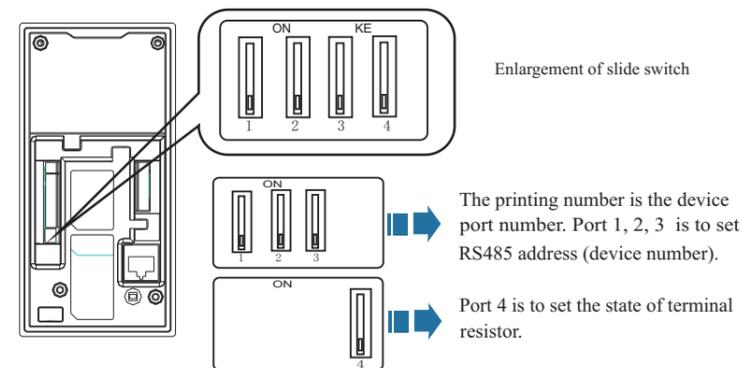

(2) TCP/IP Mode:

- Crossover cable:** The device and PC connected directly. As figure (9-2).
- Straight cable:** The device and PC connected to LAN/WAN through switch/Lanswitch. As figure (9-3).

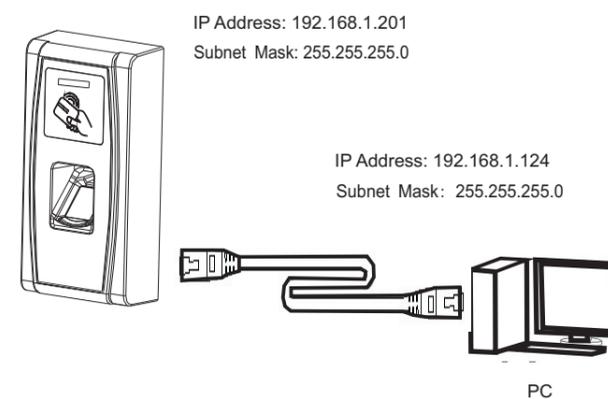


Figure (9-2)

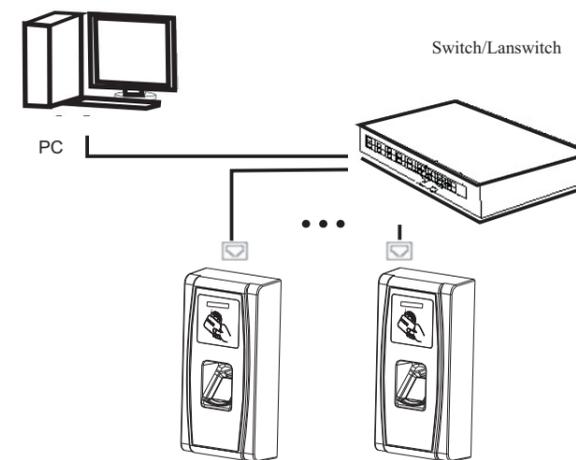


Figure (9-3)

10. Cautions:

- Power cable is connected after all the other wiring.** If the device is working abnormally, please shut down the power first, then make the necessary check. Kindly reminds you that any hot-line work may damage the device, and it is not included in the warranty.
- We recommend the 3A/12V DC Power supply. Please contact our technical staff for details.
- Please read carefully the terminal description and wiring by rule strictly.** Any damage caused by improper operations will not under warranty.
- Keep the exposed part of wire less than 5mm,** to avoid unexpected connection.
- Please connect the 'GND'** before all the other wiring especially under the environment with much electrostatic.
- Do not change the cable type because of long distance between the power and the device. Pay attention to the distance voltage decay when you choose the power cable.