

For 32 bit system, install: CP210xVCPInstaller_x86.exe

For 64 bit system, install: CP210xVCPInstaller_x64.exe