

[Quick Program guide]

email: be.seen@hotmail.com

skype: pablochen.1996

We bring value to a lot projects during the past 20 years, also save a lot cost for many customers.

If any problem, please don't return directly, that will bring big loss to me. I do support with my heart,
Contact me for solution.

Any question is good question, we have over 20 years experience, Our support is for ever.

CREATE SECURITY FOR YOU

Contents

1. Quick Trial	2
1.1 Quick try: Enroll Card or Key Fob.....	2
1.2 Quick Try: Enroll PIN Code/Password.	2
2. Official Do program for all users	3
2.1 Want to delete all users and start from Fresh.....	3
2.2 About user ID Number	3
2.3 How to Add Card/Fob User/PIN <i>with User ID Number</i>	3
2.4 How to delete PIN Code User	4
2.5 How to Delete Card/Fob User	5
3. Want to change the default program code	5
4. Want to Adjust door open time	5
5. Want to Turn On/Off LED?	5

1. Quick Trial

After wire and power on the system (**we have detail wire diagram and video for how to wire**), Now we can do a **quick trial**.

1.1 Quick try: Enroll Card or Key Fob

Press: **# 123456 #**

Press: **1**

Please swipe a card or Fob, can swipe continuously for different card/fobs

Press **#** to quit programming mode

Now swipe the enrolled card or Key fob, can open lock, you will hear a relay click voice from the device.

1.2 Quick Try: Enroll PIN Code/Password.

For example, Person: John, user ID number: 120, Password: 3458 to open door

To program John, steps as below:

Press: **# 123456 #** (123456 is the default program password)

Press: **2 2** (to add user password)

press **5678** (for example 5678 here is PIN code/Password to open door)

Press **#** again to quit programming mode

Now press 5678 then #, can open lock, you will hear a relay click voice from the device.

2. Official Do program for all users

2.1 Want to delete all users and start from Fresh

Previously, maybe do some trial, now do official program, suggest that remove all users and begin from fresh stage, **the steps** are:

Press: **# 123456 # 40 0000 #**

Now all enrolled users(card or keyfob or pin code, all deleted)

2.2 About user ID Number

Kindly Notes: Possibly a person will not work for you in future, you need to delete his/her open privilege. When do the enroll programming, we suggest you assign unique user ID number for each user and save these information, it will be easy to delete user in the future. For example, the format can be:

For example, have below records:

0001 John, card user

0002 Mary, PIN code, pin is: 4378

0003 Peter, PIN code, PIN is: 1868

0004 Michael, Key Fob user

User ID is 4 digits number, begin from 0001(0001 is the first user added in the device), increase one by one when add user

2.3 How to Add Card/Fob User/PIN *with User ID Number*

Add John:

Press: # 123456 #

press 1 (to add card)

Now, swipe John's card

press # again to quit programming mode, assign this card to John. John is the 1st user, his User ID is: 0001

Add Mary:

Press: # 123456 #
press 22 (to add user password)
press 4378 (4378 here is PIN code for Mary)
Press # again to quit programming mode. Mary's user ID is: 0002

Add Peter:

Press: # 123456 #
press 22 (to add user password)
press 1868 (1868 here is PIN code for Peter)
Press # again to quit programming mode. Peter's user ID is: 0003

2.4 How to delete PIN Code User

For example, Mary is not there working and need to remove her from system.

Method 1 to delete, Use the PIN code directly:

Press: # 123456 #
Press: 44 (to delete user Pin code)
Press **4378** (Mary's PIN code is: 4378)
Press #

Method 2 to delete, we know Mary User ID is: 0002

Press: # 123456 #
Press: 42 (to delete user by user ID number)
Press 0002 (Mary's User ID is: 0002)
Press #

2.5 How to Delete Card/Fob User

For example, John is not there working and need to remove him from system.

Method 1 to delete, we know John User ID is: 0001

Press: # 123456 #

Press: 42 (to delete user by user ID number)

Press 0001 (John's User ID is: 0001)

Press #

Method 2 to delete(If John's card or Fob is returned)

Press: # 123456 #

Press: 41 (to delete user by swipe the card or Key Fob)

Swipe the returned card or Key Fob

Press #

3. Want to change the default program code

Press: # 123456 #

then press: 0 new code # new code #

for example, new code is: 987654, you should: 0 987654 # 987654 #

4. Want to Adjust door open time

Press: # 123456 #

Press: 5 XX (XX is seconds, max is 99, want 8 seconds, XX is 08)

Press #

5. Want to Turn On/Off LED?

Press: # 123456 #

Press: 8 XX (XX is 01, LED always on; XX is 02, LED always off;

XX is 03, auto on or off)

Then Press #