


I will **support you for ever** with my nearly 20 years experience.

1. If you prefer email, I will do email support.
2. If you want phone support, I can call you(**Please tell me your phone number**)
3. Also can do teamviewer support to remotely connect to your computer to guide you, to provide live training for you.

1. For the wire diagram, picture attached.

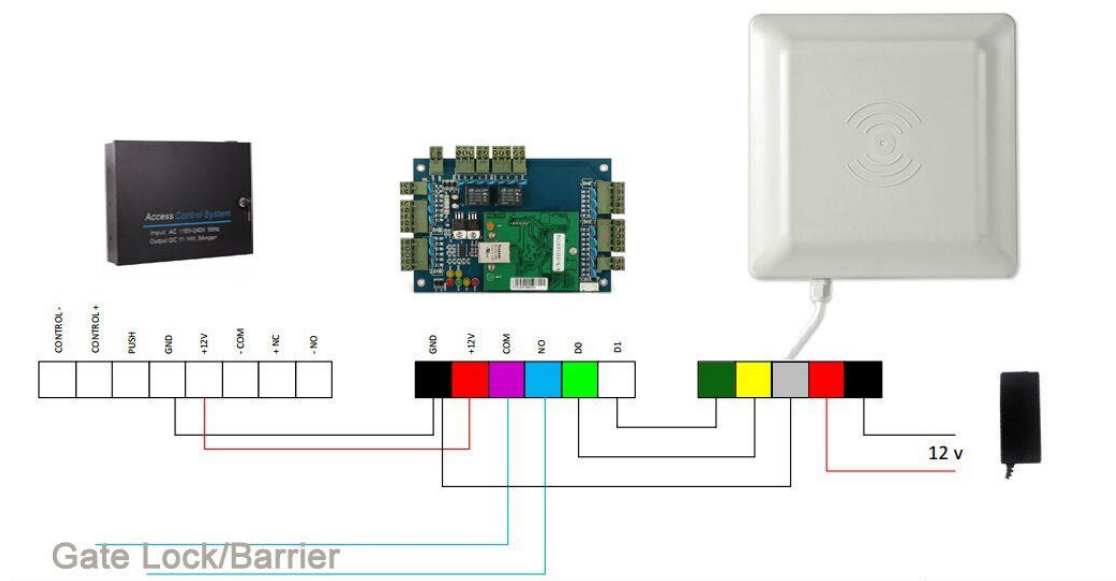

- The long reader is powered on by it's **own power adapter**.
- Long Reader's grey wire, connect to GND of Control board.
- Long Reader's yellow wire, connect to DO
- Long Reader's deep green wire, connect to D1

2. Steps guide as below.

Step 1: Wire the long reader to the control panel, following the above diagram and we also have more detail file: "LongDistance-Reader-Connection.pdf" on the cd disk to you
Install the software on computer, use network cable connect the control board to router or computer.

Step 2: Power on the long reader and the control board, in the software, search and add the control board.

Step 3: swipe the tag and do monitoring, get the tag number. Can do monitor the software to get the number. Follow below video guide:

<https://youtu.be/HJDjFnRfVD0>

Step 4: register this tag number, give it the access right, then swipe card, should hear a click voice from the control panel board.

Step 5: connect to lock or barrier .etc. normally use NO and COM

3. **For the control panel software:**

software video:

<https://youtu.be/gVoiKWtc1yI> (new)

Software download from below link(Be sure that **Software support: win7/win8/win10** both 32 and 64 bit system, run the related **setup file** to install.)

<https://beseencontrol.com/AccessControl.en.zip>

Firstly extract it to a new folder, **How to Install** software: **run related setup file** based on your computer Operating System. (**setupWin10.exe** for **Windows10**;;; **setupWin7.exe** f or **windows7**)

Password of software:

account: abc

password: 123