


Step1:

In the software, click “Operation”, click “Select All” to select all doors, then click “Adjust time”

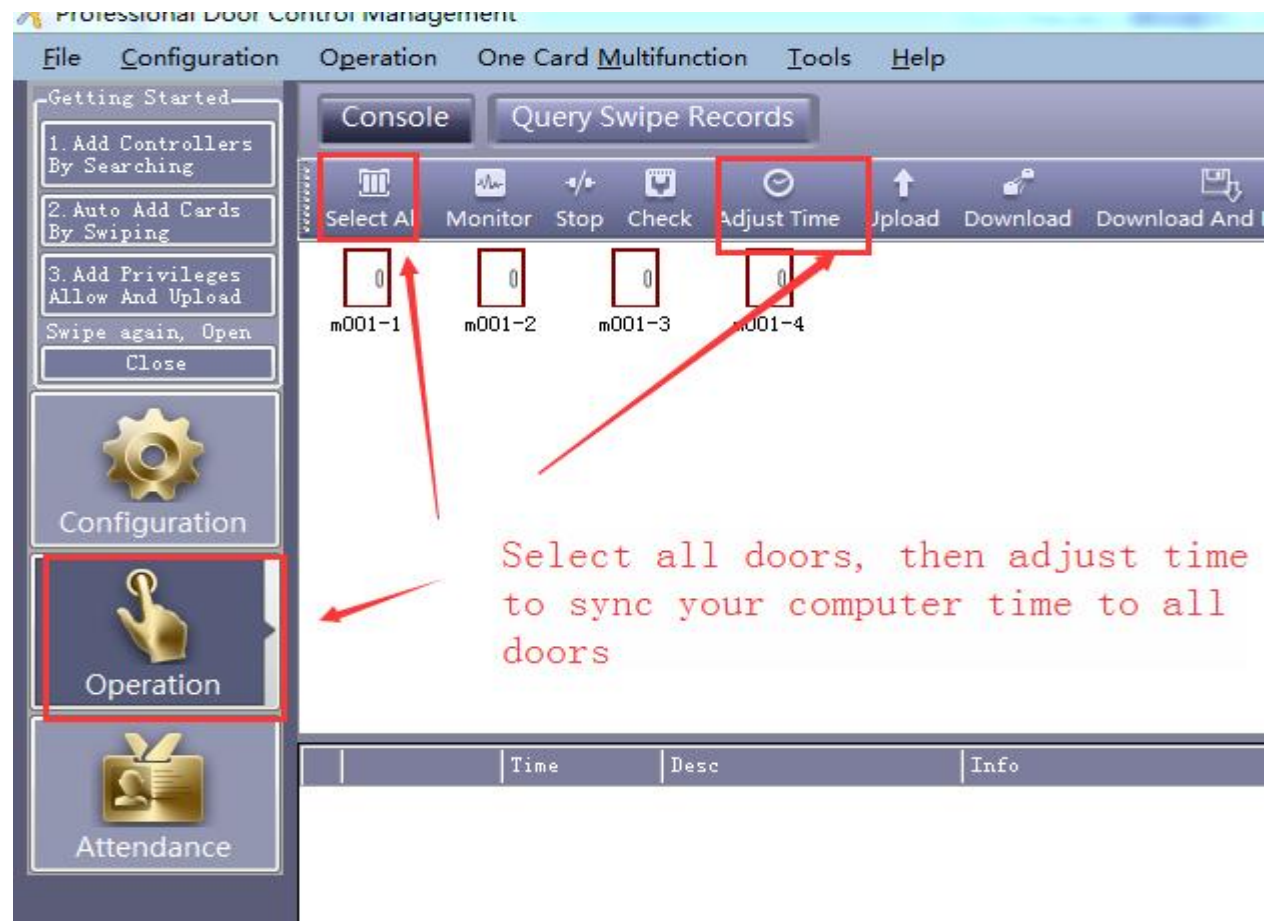

Step2:After the setting, **remember** to **upload** all settings:

