

For time profile configuration, **Check below video:**

<https://vimeo.com/794404643/4ea9f86d04>

More **advanced** feature(differnt access time during a week), check **below:**

<https://vimeo.com/794403581/494bad75dd>


Or check below manual:

Firstly sync computer time to all doors, follow below link:

<http://beseencontrol.com/SyncTime.pdf>

Step 1: activate this feature:


In the software window, click menu->“Tools”, then click “Extended Functions”, then input “5678”, you will see a lot of rich feature list.

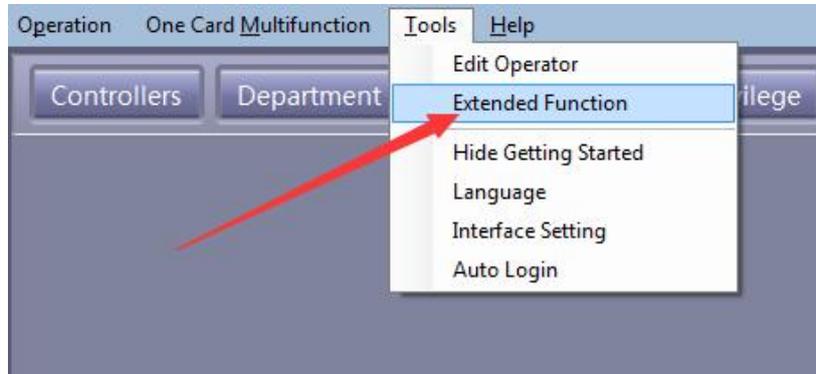


Input: 5678




Then select page "Configuration" and check the check box "ActivateTime Profile" and click ok.
Software will **re-start** automatically.

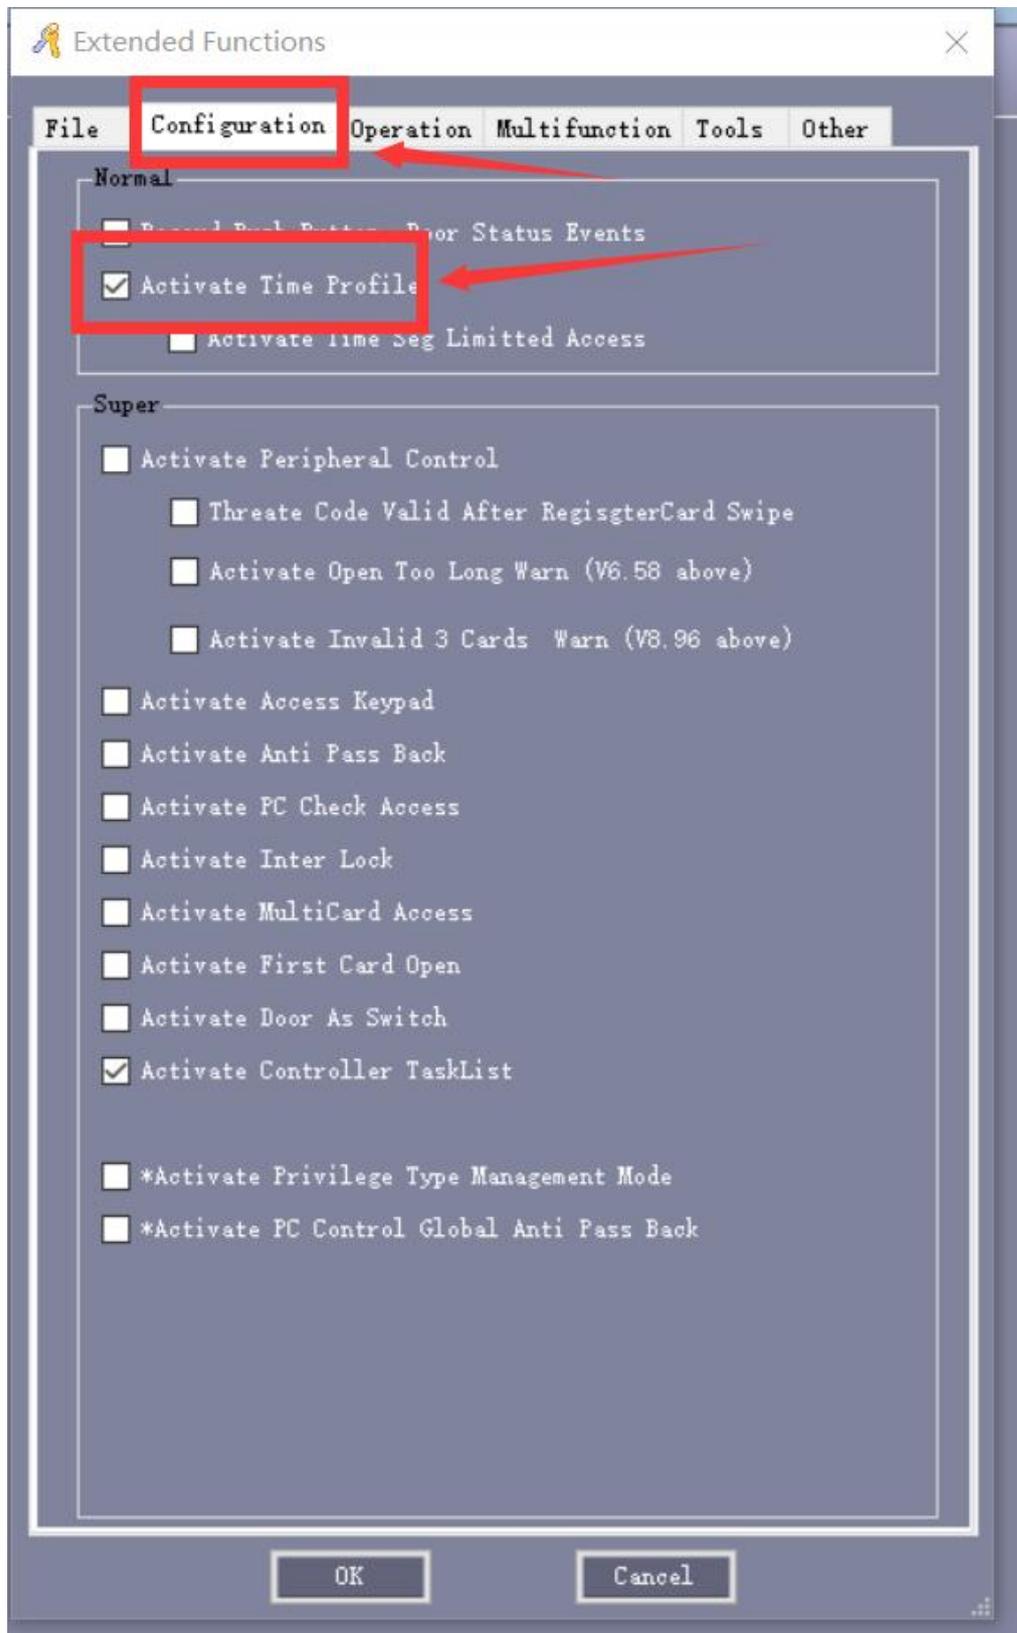

Then will have below feature button:

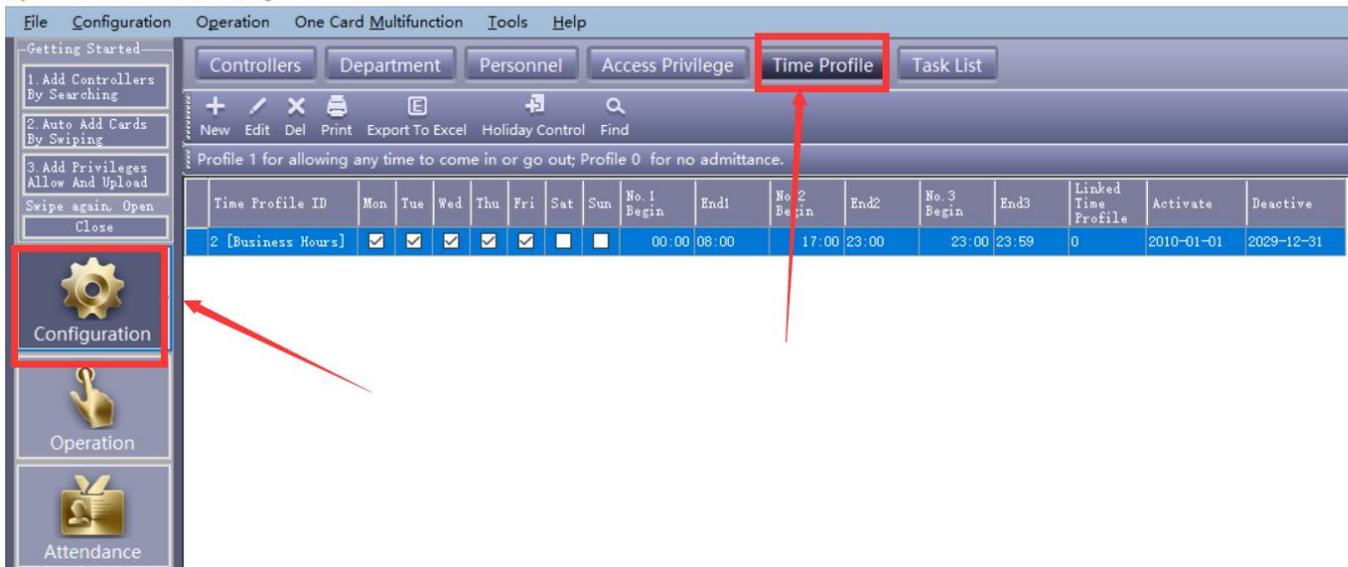

Step 2:

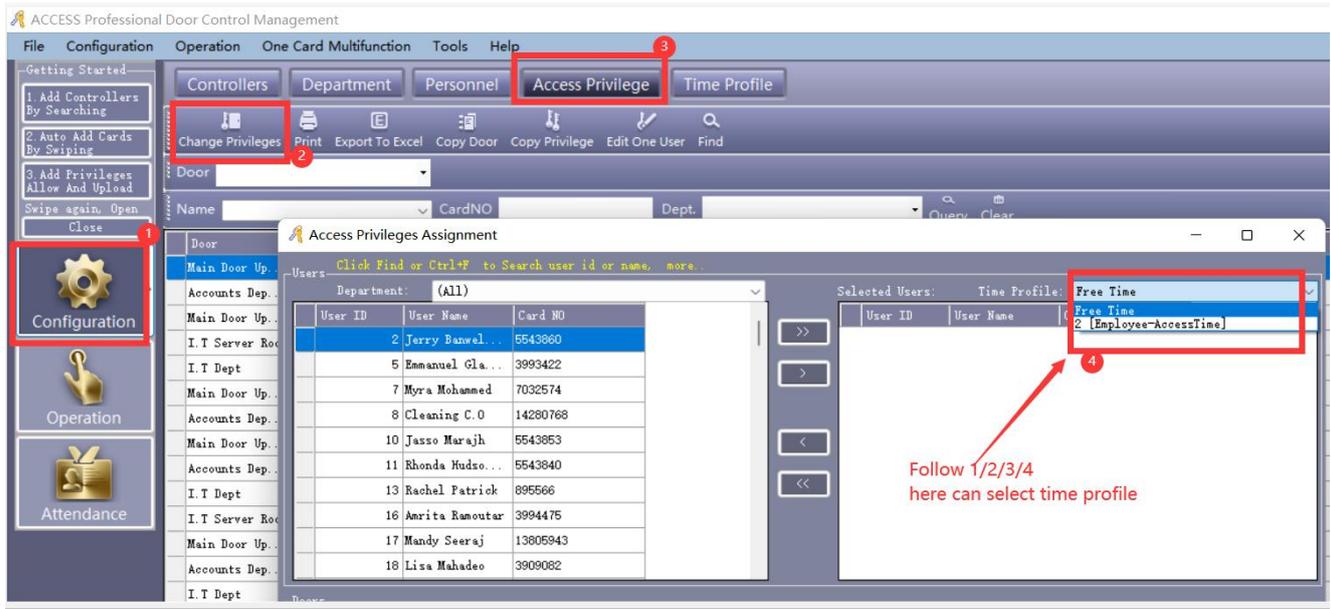

Step3:After the setting, **remember** to **upload** all settings:

