



**Important: If you have difficulty to setup WiFi, Please send message/email to us,
we will arrange Live Support by remote connect to your computer.**

From Menu-Comm->Wireless LAN, here will detect your WiFi Signal, such as below:

Click up/down to select your wifi signal item, then click OK.

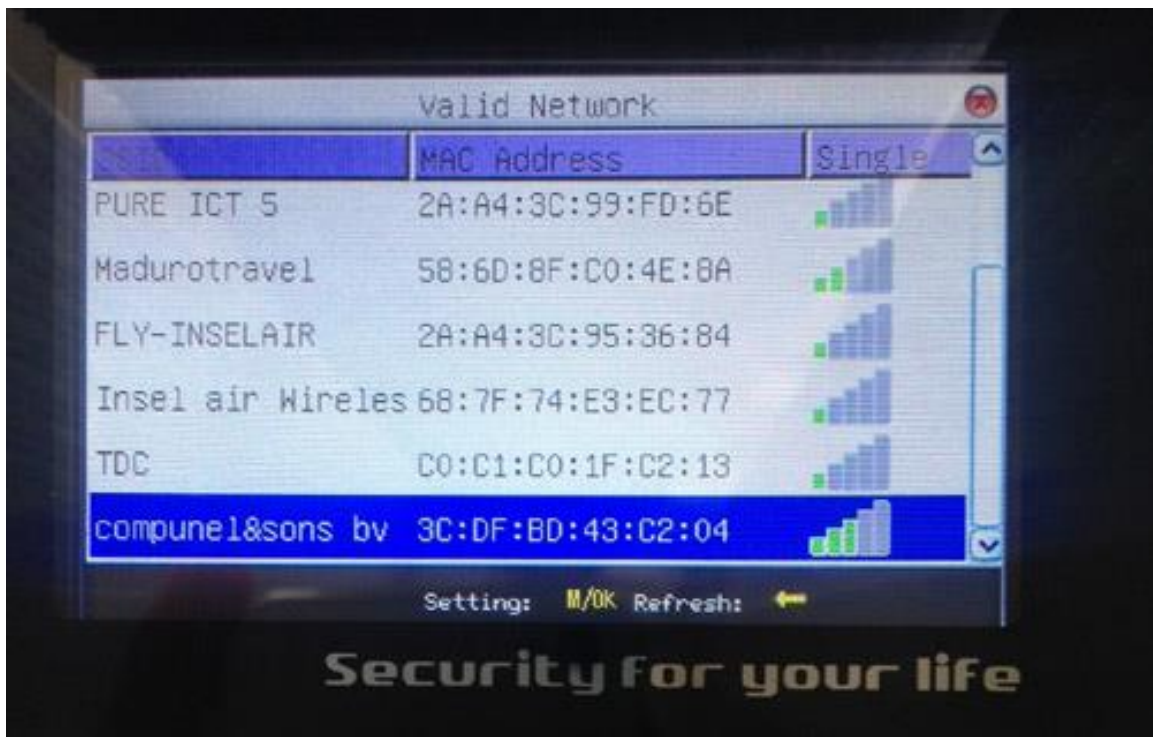

Here, set: Network Type/AuthMode/ and other items .etc. Value as below:

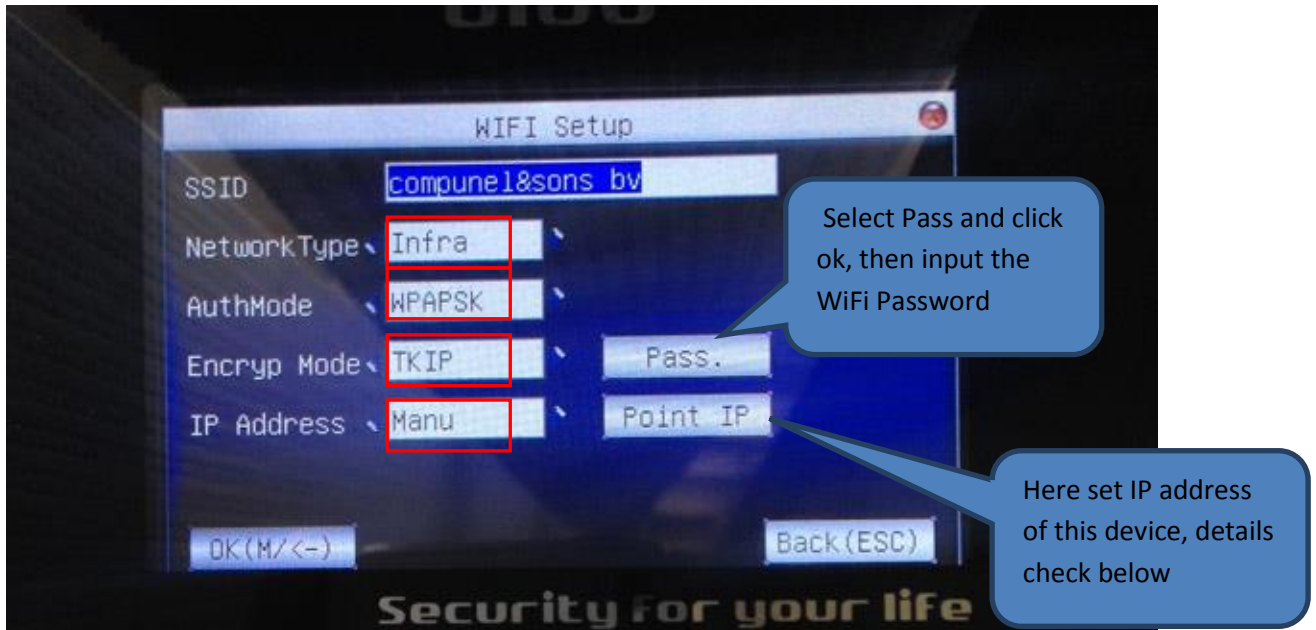

For example, Your WiFi router IP address is: 192.168.1.1, in above WiFi address setting, you can set the device IP to: 192.168.1.100

At the same time: From machine menu ->Com-> Network,

Change the network IP address to other range, the default IP address is: 192.168.1.201(here suppose router IP is also: 192.168.1.x)
so here change it to other IP area such as : 192.168.1.2.201

The reason is: the same device can't have two IP address in the same subnet range, to make WiFi IP address valid, here make the network RJ45 address in-valid.

Then save all and restart the machine.

Connect the device from Software with WiFi IP address

Connect the device by "Ethernet" type for communication, input the IP address which get from above step , then do connection.

Important: If you have difficulty to setup WiFi, Please send message/email to us,we will arrange Live Support by remote connect to your computer.