

1.Indoor Monitor operation

Main Interface:



Image 2-1 indoor monitor operation main interface

1.1 System

Enter Main Interface and click  (Above Red Circle one) then enter system setting interface.

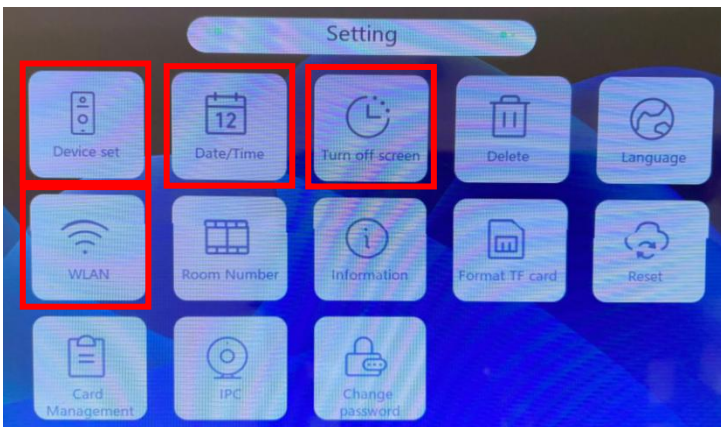


Image 2-2 indoor monitor system setting

1. **Device set:** Click and select **outdoor-1** station to enter the outdoor station setting interface.

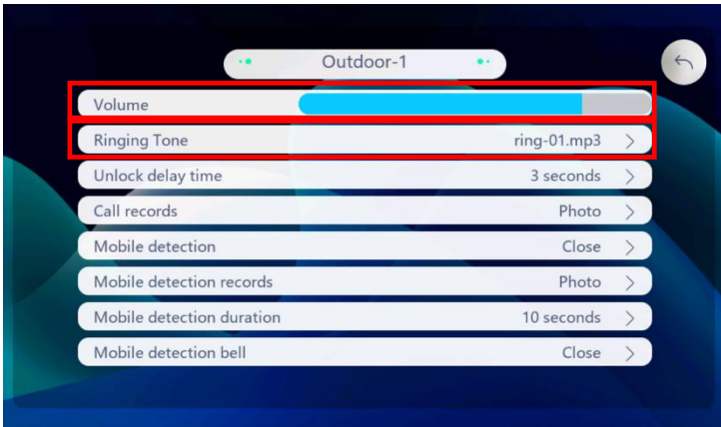


Image 2-3 outdoor station setting interface

Volume:

Set the indoor monitor ringtone volume.

Ringing Tone:

8 kinds of ringtones to choose from, click to audition.

2. **Date/Time:** Set the time format and modify the synchronization time mode to automatic or manual. In the manual time synchronization state, you can set the time, date, and time zone.

3. **Turn off screen:** Set screen off time.

4. **WLAN:** Connect the indoor monitor to WiFi with phone APP. For details, see Chapter 3.3 Adding Device.

1.2 Outdoor Call real-time screen

When **visitors** come,press outdoor Station **call button**, Real-time calling screen as below.Click  **to answer**.

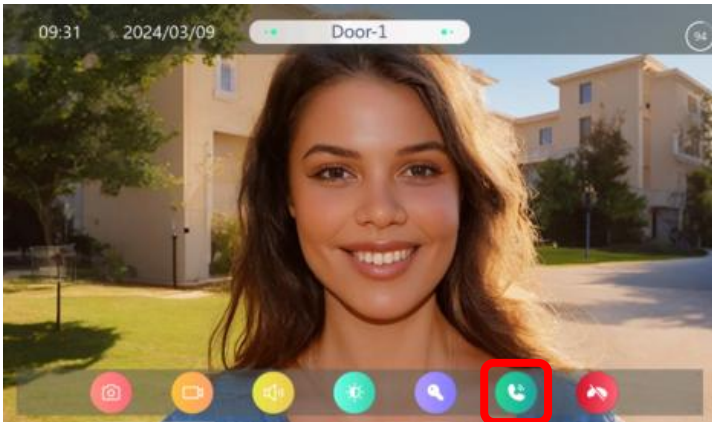


Image 2-6 Real-time call screen

-  : Take photos and record
-  : Take video recording
-  : Adjust volume
-  : Set brightness, contrast, saturation
-  : unlock
-  : **answer**
-  : hang up

1.3 Outdoor Monitor real-time screen

Enter Main Interface and click  then enter Real-time monitoring screen. Click  to speak.

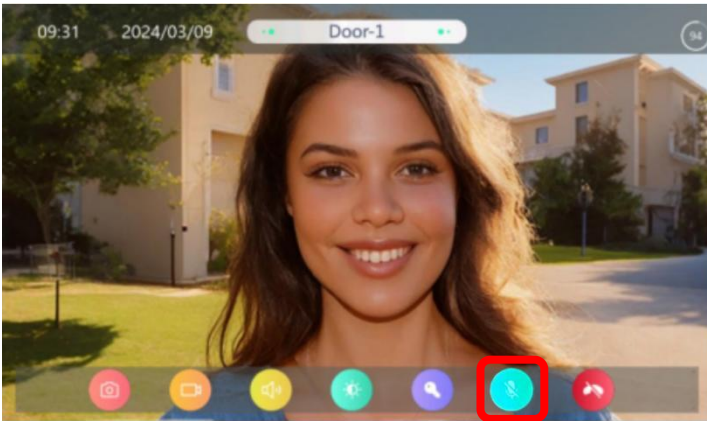


Image 2-7 Real-time monitoring screen